


The background of the top half of the cover is a dark blue technical drawing. It features various mechanical sketches, including cross-sections of gears, shafts, and housing components. Faint white lines and numbers (like 16, 17, 29, 21, 18, 24, 20) are visible, suggesting a detailed engineering plan. The title text is overlaid on this background.

Design and Analysis of Mechanisms

A Planar Approach

Michael J. Rider

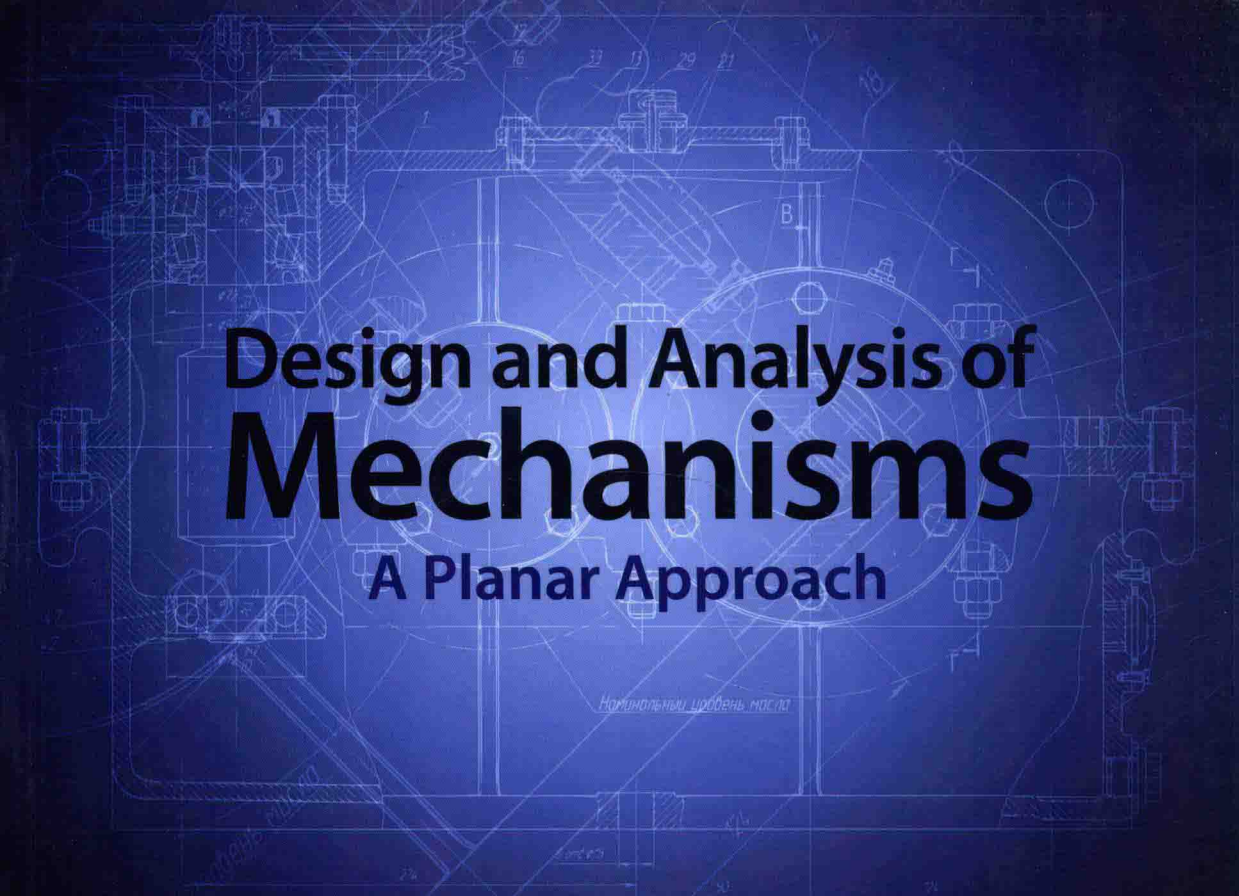

WILEY

DESIGN AND ANALYSIS OF MECHANISMS

A PLANAR APPROACH

Michael J. Rider, Ph.D.

Professor of Mechanical Engineering, Ohio Northern University, USA

WILEY

This edition first published 2015
© 2015 John Wiley & Sons, Ltd.

Registered Office

John Wiley & Sons, Ltd, The Atrium, Southern Gate, Chichester, West Sussex, PO19 8SQ, United Kingdom.

For details of our global editorial offices, for customer services and for information about how to apply for permission to reuse the copyright material in this book please see our website at www.wiley.com.

The right of the author to be identified as the author of this work has been asserted in accordance with the Copyright, Designs and Patents Act 1988.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, except as permitted by the UK Copyright, Designs and Patents Act 1988, without the prior permission of the publisher.

Wiley also publishes its books in a variety of electronic formats. Some content that appears in print may not be available in electronic books.

Designations used by companies to distinguish their products are often claimed as trademarks. All brand names and product names used in this book are trade names, service marks, trademarks or registered trademarks of their respective owners. The publisher is not associated with any product or vendor mentioned in this book.

Limit of Liability/Disclaimer of Warranty: While the publisher and author have used their best efforts in preparing this book, they make no representations or warranties with respect to the accuracy or completeness of the contents of this book and specifically disclaim any implied warranties of merchantability or fitness for a particular purpose. It is sold on the understanding that the publisher is not engaged in rendering professional services and neither the publisher nor the author shall be liable for damages arising herefrom. If professional advice or other expert assistance is required, the services of a competent professional should be sought.

Library of Congress Cataloging-in-Publication Data

Rider, Michael J.

Design and analysis of mechanisms : a planar approach / Michael J. Rider, Ph.D.

pages cm

Includes bibliographical references and index.

ISBN 978-1-119-05433-7 (pbk.)

1. Gearing. 2. Mechanical movements. I. Title.

TJ181.R53 2015

621.8'15-dc23

2015004426

A catalogue record for this book is available from the British Library.

Set in 10/12pt Times by SPi Global, Pondicherry, India

Printed in Singapore by C.O.S. Printers Pte Ltd

1 2015

Basic Trigonometry Functions

$$\sin \theta = \frac{\text{opposite side}}{\text{hypotenuse}} = \frac{O}{H}$$


$$-90^\circ \leq \left[\theta = \sin^{-1} \left(\frac{O}{H} \right) \right] \leq 90^\circ$$

$$\cos \theta = \frac{\text{adjacent side}}{\text{hypotenuse}} = \frac{A}{H}$$

$$0^\circ \leq \left[\theta = \cos^{-1} \left(\frac{A}{H} \right) \right] \leq 180^\circ$$

$$\tan \theta = \frac{\text{opposite side}}{\text{adjacent side}} = \frac{O}{A}$$

$$-90^\circ \leq \left[\theta = \tan^{-1} \left(\frac{O}{A} \right) \right] \leq 90^\circ$$

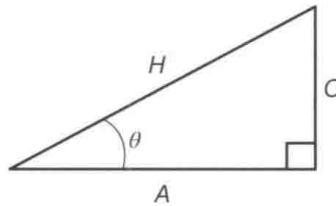


Sine Law

$$\frac{A}{\sin \theta_A} = \frac{B}{\sin \theta_B} = \frac{C}{\sin \theta_C}$$

Cosine Law

$$C^2 = A^2 + B^2 - 2AB \cos \theta_C$$

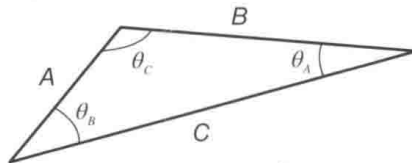

$$\sin(-\theta) = -\sin(\theta)$$

$$\sin(\theta + 90^\circ) = \cos(\theta)$$

$$\cos(-\theta) = \cos(\theta)$$

$$\sin(\theta - 90^\circ) = -\cos(\theta)$$

$$\sin(\theta + \phi) = \cos \theta \sin \phi + \sin \theta \cos \phi$$

$$\sin(\theta \pm 180^\circ) = -\sin(\theta)$$

$$\sin(\theta - \phi) = \cos \theta \sin \phi - \sin \theta \cos \phi$$

$$\cos(\theta + 90^\circ) = -\sin(\theta)$$

$$\cos(\theta + \phi) = \cos \theta \cos \phi - \sin \theta \sin \phi$$

$$\cos(\theta - 90^\circ) = \sin(\theta)$$

$$\cos(\theta - \phi) = \cos \theta \cos \phi + \sin \theta \sin \phi$$

$$\cos(\theta \pm 180^\circ) = -\cos(\theta)$$

DESIGN AND ANALYSIS OF MECHANISMS

Preface

The intent of this book is to provide a teaching tool that features a straightforward presentation of basic principles while having the rigor to serve as basis for more advanced work. This text is meant to be used in a single-semester course, which introduces the basics of planar mechanisms. Advanced topics are not covered in this text because the semester time frame does not allow these advanced topics to be covered. Although the book is intended as a textbook, it has been written so that it can also serve as a reference book for planar mechanism kinematics. This is a topic of fundamental importance to mechanical engineers.

Chapter 1 contains sections on basic kinematics of planar linkages, calculating the degrees of freedom, looking at inversions, and checking the assembling of planar linkages. Chapter 2 looks at position analysis, both graphical and analytical, along with a vector approach, which is the author's preferred method. Chapter 3 looks at graphical design of planar linkages including four-bar linkages, slider-crank mechanisms, and six-bar linkages. Chapter 4 looks at the analytical design of the same planar linkages found in the previous chapter. Chapter 5 deals with velocity analysis of planar linkages including the relative velocity method, the instant center method, and the vector approach. Chapter 6 deals with the acceleration analysis of planar linkages including the relative acceleration method and the vector approach. Chapter 7 deals with the static force analysis of planar linkages including free body diagrams, equations for static equilibrium, and solving a system of linear equations. Chapter 8 deals with the dynamic force analysis based on Newton's law of motion, conservation of energy and conservation of momentum. Adding a flywheel to the mechanism is also investigated in this chapter. Chapter 9 deals with spur gears, contact ratios, interference, basic gear equations, simple gear trains, compound gear trains, and planetary gear trains. Chapter 10 deals with fundamental cam design while looking at different types of followers and different types of follower motion and determining the cam's profile.

There are numerous problems at the end of each chapter to test the student's understanding of the subject matter.

Appendix A discusses the basics of using the Engineering Equation Solver (EES) and how it can be used to solve planar mechanism problems. Appendix B discusses the basics of MATLAB and how it can be used to solve planar mechanism problems.

Contents

Preface	viii
1 Introduction to Mechanisms	1
1.1 Introduction	1
1.2 Kinematic Diagrams	2
1.3 Degrees of Freedom or Mobility	5
1.4 Grashof's Equation	7
1.5 Transmission Angle	7
1.6 Geneva Mechanism	10
Problems	12
Reference	15
2 Position Analysis of Planar Linkages	16
2.1 Introduction	16
2.2 Graphical Position Analysis	17
2.2.1 Graphical Position Analysis for a 4-Bar	17
2.2.2 Graphical Position Analysis for a Slider-Crank Linkage	19
2.3 Vector Loop Position Analysis	20
2.3.1 What Is a Vector?	20
2.3.2 Finding Vector Components of $M \angle \theta$	21
2.3.3 Position Analysis of 4-Bar Linkage	23
2.3.4 Position Analysis of Slider-Crank Linkage	36
2.3.5 Position Analysis of 6-Bar Linkage	47
Problems	49
Programming Exercises	63
3 Graphical Design of Planar Linkages	66
3.1 Introduction	66
3.2 Two-Position Synthesis for a Four-Bar Linkage	67
3.3 Two-Position Synthesis for a Quick Return 4-Bar Linkage	69
3.4 Two-Positions for Coupler Link	72
3.5 Three Positions of the Coupler Link	72
3.6 Coupler Point Goes Through Three Points	75
3.7 Coupler Point Goes Through Three Points with Fixed Pivots and Timing	78

3.8	Two-Position Synthesis of Slider-Crank Mechanism	82
3.9	Designing a Crank-Shaper Mechanism	84
	Problems	88
4	Analytical Linkage Synthesis	95
4.1	Introduction	95
4.2	Chebyshev Spacing	95
4.3	Function Generation Using a 4-Bar Linkage	98
4.4	Three-Point Matching Method for 4-Bar Linkage	100
4.5	Design a 4-Bar Linkage for Body Guidance	103
4.6	Function Generation for Slider-Crank Mechanisms	106
4.7	Three-Point Matching Method for Slider-Crank Mechanism	108
	Problems	112
	Further Reading	114
5	Velocity Analysis	115
5.1	Introduction	115
5.2	Relative Velocity Method	116
5.3	Instant Center Method	123
5.4	Vector Method	137
	Problems	146
	Programming Exercises	156
6	Acceleration	159
6.1	Introduction	159
6.2	Relative Acceleration	160
6.3	Slider-Crank Mechanism with Horizontal Motion	161
6.4	Acceleration of Mass Centers for Slider-Crank Mechanism	164
6.5	Four-bar Linkage	165
6.6	Acceleration of Mass Centers for 4-bar Linkage	170
6.7	Coriolis Acceleration	171
	Problems	176
	Programming Exercises	184
7	Static Force Analysis	187
7.1	Introduction	187
7.2	Forces, Moments, and Free Body Diagrams	188
7.3	Multiforce Members	192
7.4	Moment Calculations Simplified	198
	Problems	199
	Programming Exercises	204
8	Dynamics Force Analysis	207
8.1	Introduction	207
8.2	Link Rotating about Fixed Pivot Dynamic Force Analysis	209
8.3	Double-Slider Mechanism Dynamic Force Analysis	211
	Problems	214

9	Spur Gears	219
9.1	Introduction	219
9.2	Other Types of Gears	219
9.3	Fundamental Law of Gearing	220
9.4	Nomenclature	223
9.5	Tooth System	225
9.6	Meshing Gears	226
	9.6.1 <i>Operating Pressure Angle</i>	227
	9.6.2 <i>Contact Ratio</i>	227
9.7	Noninterference of Gear Teeth	228
9.8	Gear Racks	231
9.9	Gear Trains	232
	9.9.1 <i>Simple Gear Train</i>	233
	9.9.2 <i>Compound Gear Train</i>	233
	9.9.3 <i>Inverted Compound Gear Train</i>	236
	9.9.4 <i>Kinetic Energy of a Gear</i>	238
9.10	Planetary Gear Systems	240
	9.10.1 <i>Differential</i>	242
	9.10.2 <i>Clutch</i>	243
	9.10.3 <i>Transmission</i>	243
	9.10.4 <i>Formula Method</i>	245
	9.10.5 <i>Table Method</i>	248
	Problems	249
10	Planar Cams and Cam Followers	255
10.1	Introduction	255
10.2	Follower Displacement Diagrams	257
10.3	Harmonic Motion	259
10.4	Cycloidal Motion	260
10.5	5-4-3 Polynomial Motion	262
10.6	Fifth-Order Polynomial Motion	263
10.7	Cam with In-Line Translating Knife-Edge Follower	265
10.8	Cam with In-Line Translating Roller Follower	266
10.9	Cam with Offset Translating Roller Follower	272
10.10	Cam with Translating Flat-Face Follower	273
	Problems	277
	Appendix A: Engineering Equation Solver	279
	Appendix B: MATLAB	296
	Further Reading	306
	Index	307

1

Introduction to Mechanisms

1.1 Introduction

Engineering involves the design and analysis of machines that deal with the conversion of energy from one source to another using the basic principles of science. Solid mechanics is one of these branches. It contains three major sub-branches: kinematics, statics, and kinetics. Kinematics deals with the study of relative motion. Statics is the study of forces and moments apart from motion. Kinetics deals with the result of forces and moments on bodies. The combination of kinematics and kinetics is referred to as dynamics. However, dynamics deals with the study of motion caused by forces and torques. For mechanism design, the desired motion is known and the task is to determine the type of mechanism along with the required forces and torques to produce the desired motion. This text covers some of the mathematics, kinematics, and kinetics required to perform planar mechanism design and analysis.

A mechanism is a mechanical device that transfers motion and/or force from a source to an output. A linkage consists of links generally considered rigid which are connected by joints such as pins or sliders. A kinematic chain with at least one fixed link becomes a mechanism if at least two other links can move. Since linkages make up simple mechanisms and can be designed to perform complex tasks, they are discussed throughout this book.

A large majority of mechanisms exhibit motion such that all the links moved in parallel planes. This text emphasizes this type of motion, which is called two-dimensional planar motion. Planar rigid body motion consists of rotation about an axis perpendicular to the plane of motion and translation in the plane of motion. For this text, all links are assumed rigid bodies.

Mechanisms are used in a variety of machines and devices. The simplest closed form linkage is a 4-bar, which has three moving links plus one fixed link and four pinned joints. The link that does not move is called the ground link. The link that is connected to the power source is called the input link. The follower link contains a moving pivot point relative to ground and it is typically considered as

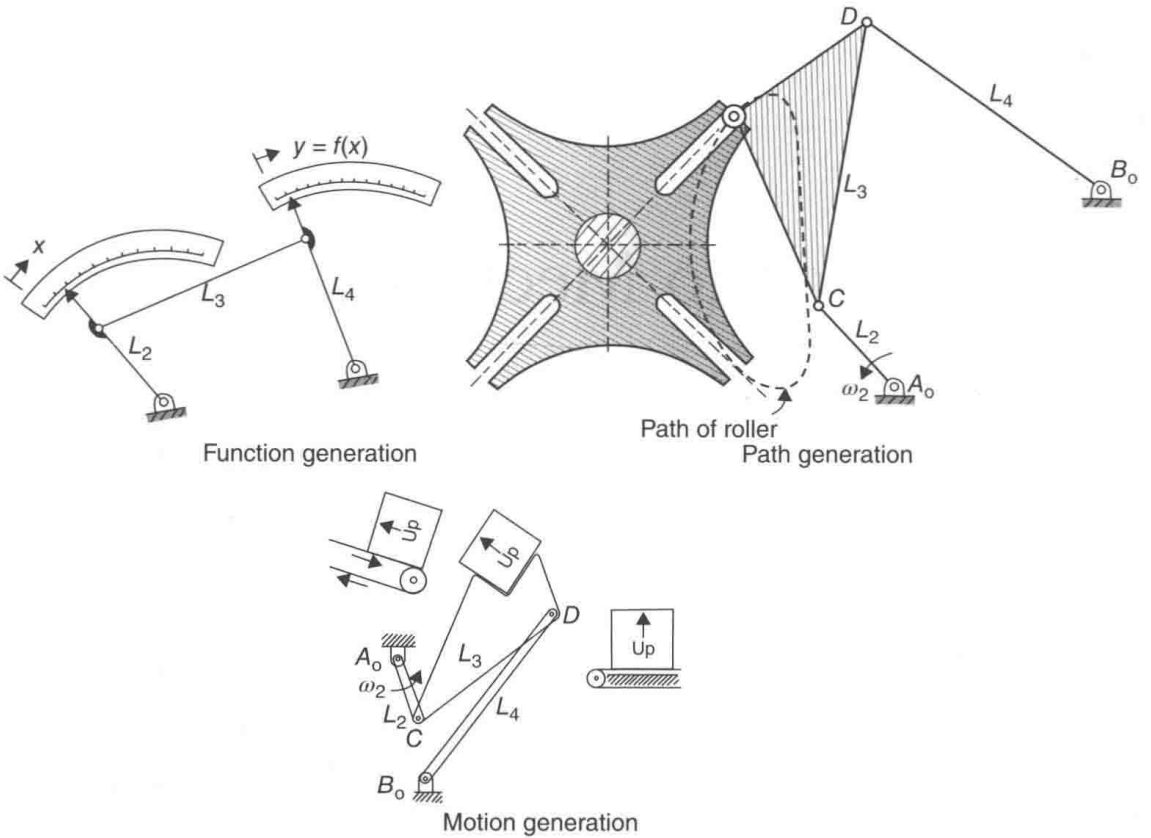


Figure 1.1 4-Bar linkages

the output link. The coupler link consists of two moving pivots, points C and D , thereby coupling the input link to the output link. A point on the coupler link generally traces out a sixth-order algebraic coupler curve. Very different coupler curves can be generated by using a different tracer point on the coupler link. Hrones and Nelson's *Analysis of 4-Bar Linkages* [1] published in 1951 shows many different types of coupler curves and their appropriate 4-bar linkage.

The 4-bar linkage is the most common chain of pin-connected links that allows relative motion between the links (see Figure 1.1). These linkages can be classified into three categories depending on the task that the linkage performs: function generation, path generation, and motion generation. A **function generator** is a linkage in which the relative motion or forces between the links connected to ground is of interest. In function generation, the task does not require a tracer point on the coupler link. In **path generation**, only the path of the tracer point on the coupler link is important and not the rotation of the coupler link. In **motion generation**, the entire motion of the coupler link is important, that is, the path that the tracer point follows and the angular orientation of the coupler link.

1.2 Kinematic Diagrams

The first step in designing or analyzing a mechanical linkage is to draw the kinematic diagram. A kinematic diagram is a “stick-figure” representation of the linkage as shown in Figure 1.2.

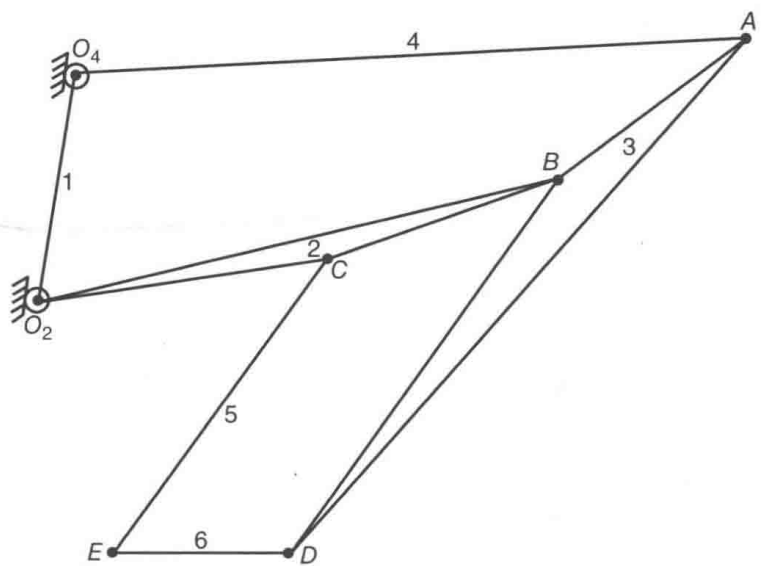


Figure 1.2 Kinematic diagram

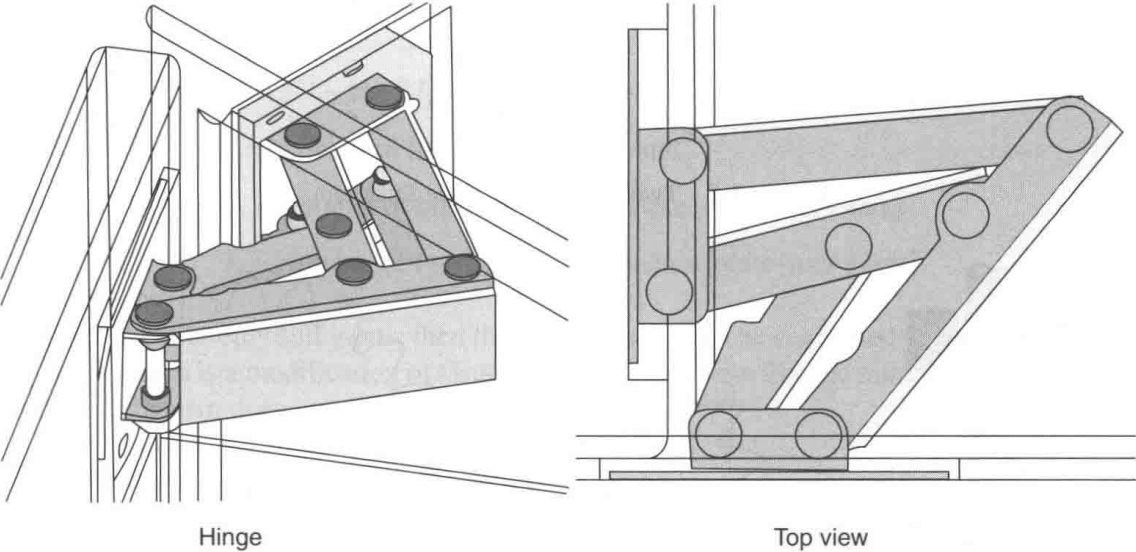


Figure 1.3 Physical system

The kinematic diagram is made up of nodes and straight lines and serves the same purpose as an electrical circuit schematic used for design and analysis purposes. It is a simplified version of the system so you can concentrate on the analysis and design instead of the building of the system. The actual 3D model is shown in Figure 1.3.

For convenience, the links are numbered starting with the ground link as number 1, the input link as number 2, then proceeding through the linkage. The purpose of a kinematic diagram is to show the relative motion between links. For example, a slider depicts translation while a pin joint depicts rotation. The joints are lettered starting with letter A , B , C , etc. On some kinematic

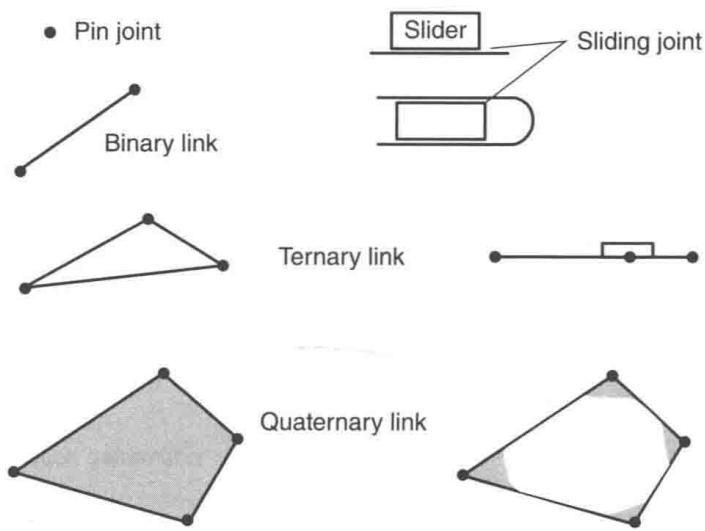


Figure 1.4 Planar links and joints

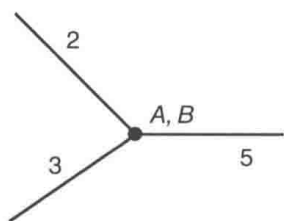


Figure 1.5 Two joints where three links join

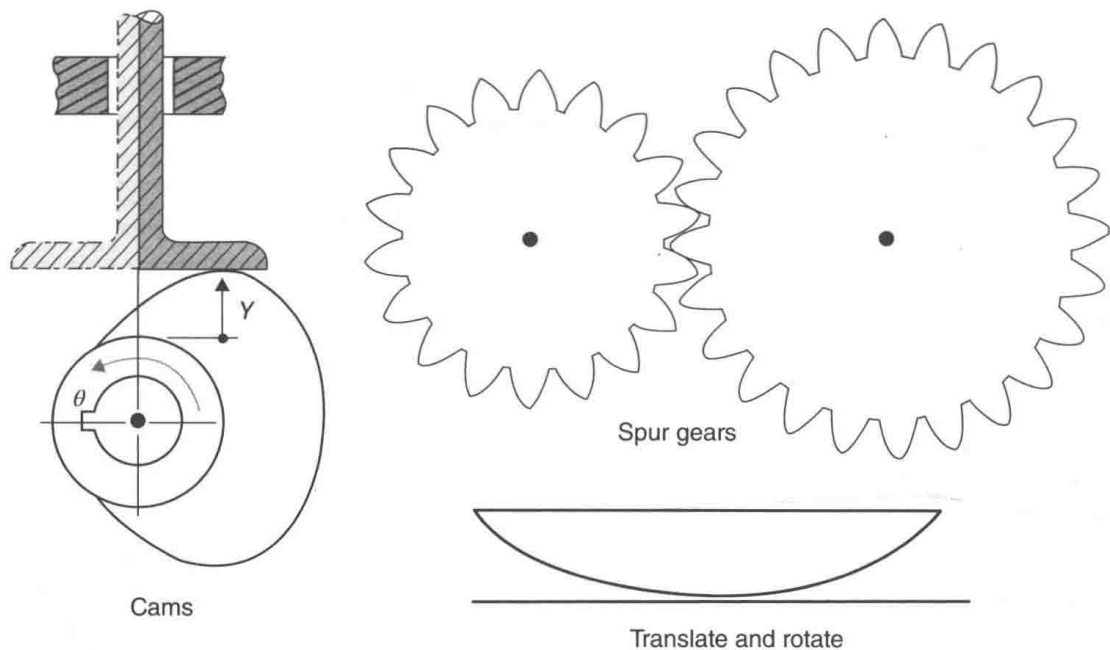


Figure 1.6 Half joints

diagrams, it is preferred to label fixed rotational pin joints using the letter O ; thus link 2 connected to ground at a fixed bearing would be labeled O_2 and link 4 connected to ground at a fixed bearing would be O_4 . Both notations are used in this book.

A link is a rigid body with at least two nodes. A node is a point on a link that attaches to another link. Connecting two links together forms a joint. The two most common types of nodes are the pin joint and the sliding joint; each has one degree of freedom. Links are categorized by the number of joints present on them. For example, a binary link has two nodes and a ternary link has three nodes (see Figure 1.4).

If three links come together at a point, the point must be considered as two joints since a joint is the connection between two links, not three links (see Figure 1.5).

A full joint has one degree of freedom. A half joint has two degree of freedom. Figure 1.6 shows half joints which can translate and rotate. A system with one degree of freedom requires one input to move all links. A system with two degrees of freedom requires two inputs to move all links. Thus, the degrees of freedom represent the required number of inputs for a given system.

1.3 Degrees of Freedom or Mobility

Kutzbach's criterion for 2D planar linkages calculates the number of degrees of freedom or mobility for a given linkage.

$$M = 3(L - 1) - 2J_1 - J_2$$

L = Number of links including ground

J_1 = Number of one degree of freedom joints (full joints)

J_2 = Number of two degrees of freedom joints (half joints)

If we consider only full joints, then the mobility can also be calculated using the following equation which is a modification of Gruebler's equation. Note that the number of ternary links in the mechanism does not affect its mobility.

$$M = B - Q - 2P - 3$$

B = Number of binary links (2 nodes)

Q = Number of quaternary links (4 nodes)

P = Number of pentagonal links (5 nodes)

A 4-bar linkage has one degree of freedom. So does a slider-crank mechanism as seen in Figure 1.7. Each has four binary links and four full joints.

$$M = 3(L - 1) - 2J_1 - J_2 = 3(4 - 1) - 2(4) - 0 = 1$$

or

$$M = B - Q - 2P - 3 = 4 - 0 - 2(0) - 3 = 1$$

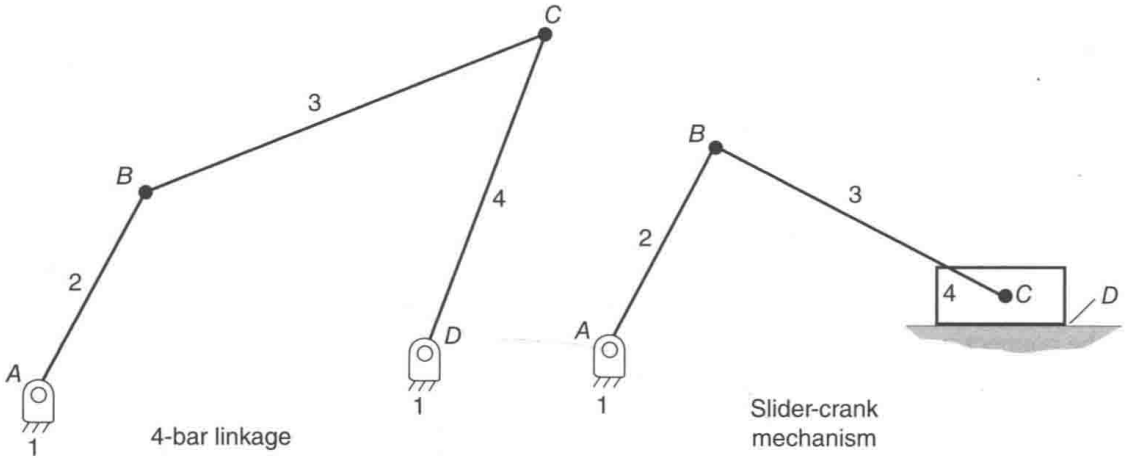


Figure 1.7 Mechanisms with four links

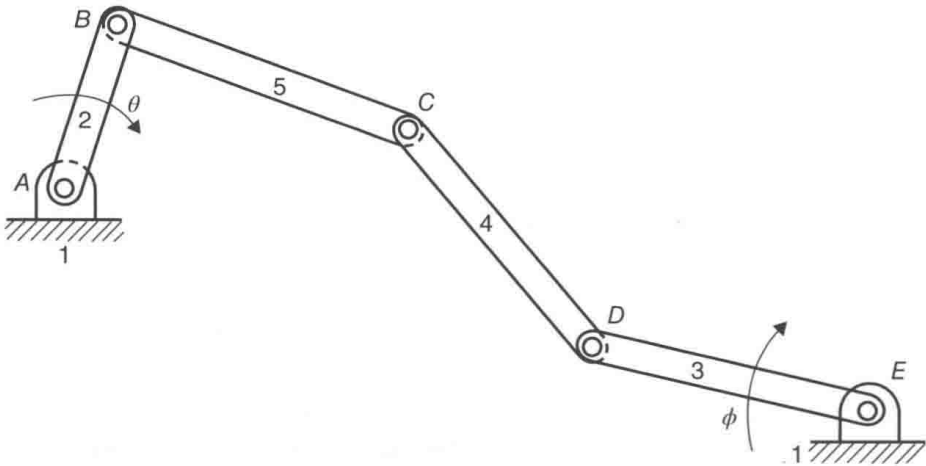


Figure 1.8 Five-bar linkage

A 5-bar linkage has two degrees of freedom. It has five binary links and five full joints. The 5-bar requires two separate inputs as shown in Figure 1.8.

$$M = 3(5 - 1) - 2(5) - 0 = 2$$

A 6-bar linkage with two ternary links has one degree of freedom. It has six links and seven full joints. A 6-bar linkage can be put together in two different configurations, the Watt 6-bar and the Stephenson 6-bar, as shown in Figure 1.9. What is the difference between these configurations?

The Watt 6-bar linkage has the two ternary links connected together, whereas the Stephenson 6-bar linkage has the two ternary link separated by a binary link.

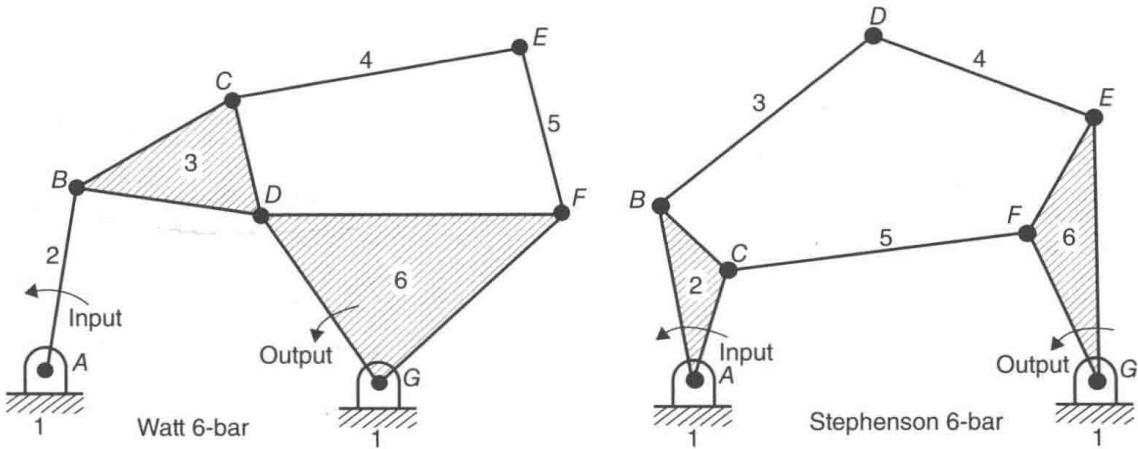


Figure 1.9 6-Bar linkage (2 configurations)

1.4 Grashof’s Equation

A mark of a “good design” is simplicity. A design with the fewest moving parts is in general less expensive and more reliable. With this in mind, a 4-bar linkage is best if it works for your application.

Grashof’s equation states that at least one link will rotate through 360° if $S + L \leq P + Q$ where

- S = Shortest link
- L = Longest link
- P, Q = Other two links

If Grashof’s equation is not true, then no link will rotate through 360°. If $S + L > P + Q$, then the 4-bar linkage is a triple rocker. If $S + L = P + Q$, then all inversions are either double-crank mechanisms or crank-rocker mechanisms with a change-over point where it will move from an open loop configuration to a crossed configuration.

If $S + L \leq P + Q$, then based on where the shortest link is located, the 4-bar linkage is as follows:

- a. Crank-crank if S is the ground link
- b. Crank-rocker if S is the input link
- c. Double-rocker if S is the coupler link (see Figure 1.10)
- d. Rocker-crank if S is the output link

1.5 Transmission Angle

In Figure 1.11, the acute angle between the coupler link, L_3 , and the follower link, L_4 , is called the transmission angle, μ . For equilibrium of link 4, the sum of the torques about point B_o must be zero. Since the coupler link, link 3, is a two-force member, the force that link 3 applies to link 4 is along link 3. Thus, the torque that link 4 experiences about B_o is $\text{Torque}_4 = \text{Force}_{34} L_4 \sin \mu$.

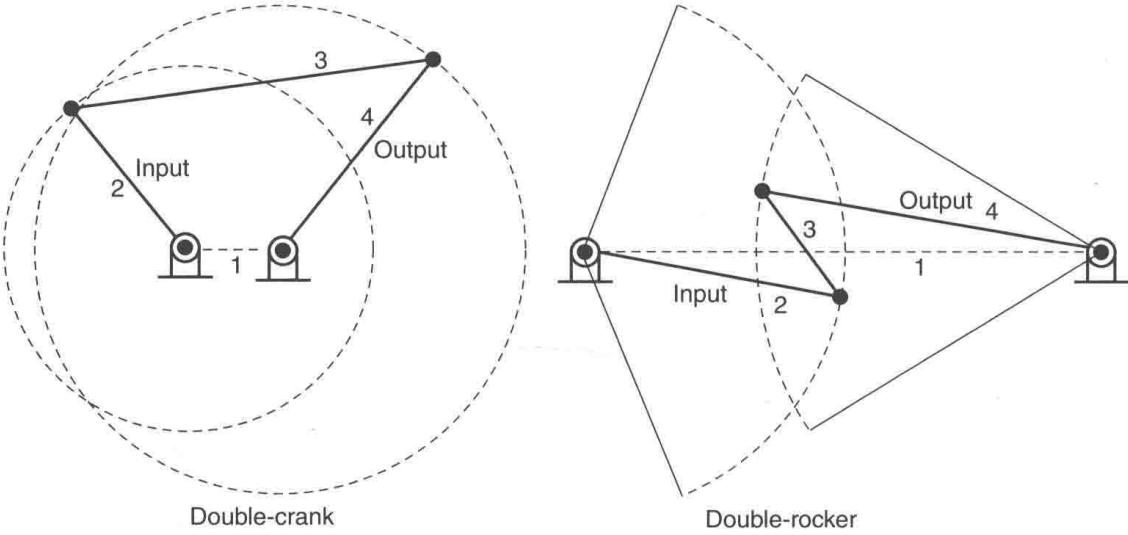


Figure 1.10 Double-crank and double-rocker

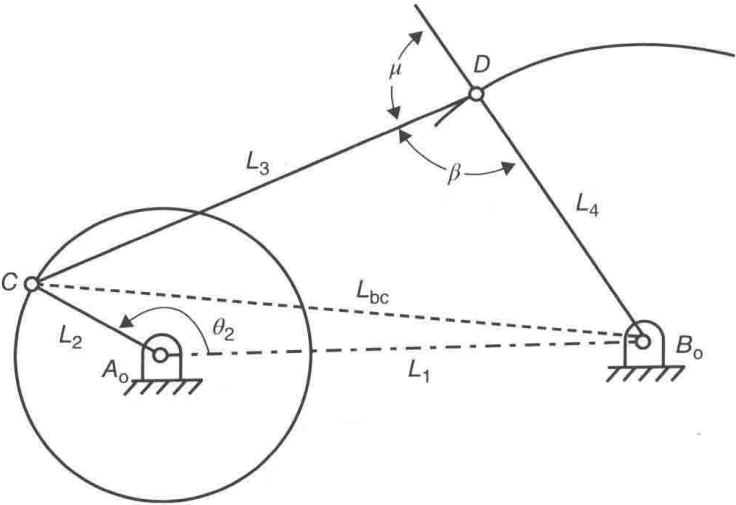


Figure 1.11 Transmission angle

Now looking at the two triangles that have L_{bc} in common, we can use the cosine law and relate θ_2 to β .

$$L_{bc}^2 = L_1^2 + L_2^2 - 2L_1L_2 \cos \theta_2$$

and

$$L_{bc}^2 = L_3^2 + L_4^2 - 2L_3L_4 \cos \beta$$

If we set the two equations equal to each other and solve for β , we have:

$$\beta = \cos^{-1} \left(\frac{L_3^2 + L_4^2 - (L_1^2 + L_2^2 - 2L_1L_2 \cos \theta_2)}{2L_3L_4} \right)$$